


PRONGHORN RIFLE-N-BOW BUCKET




HORIZONTAL RIFLE / BOW RETENTION STRAP

QUICK-RELEASE
ATTACHING LOOP

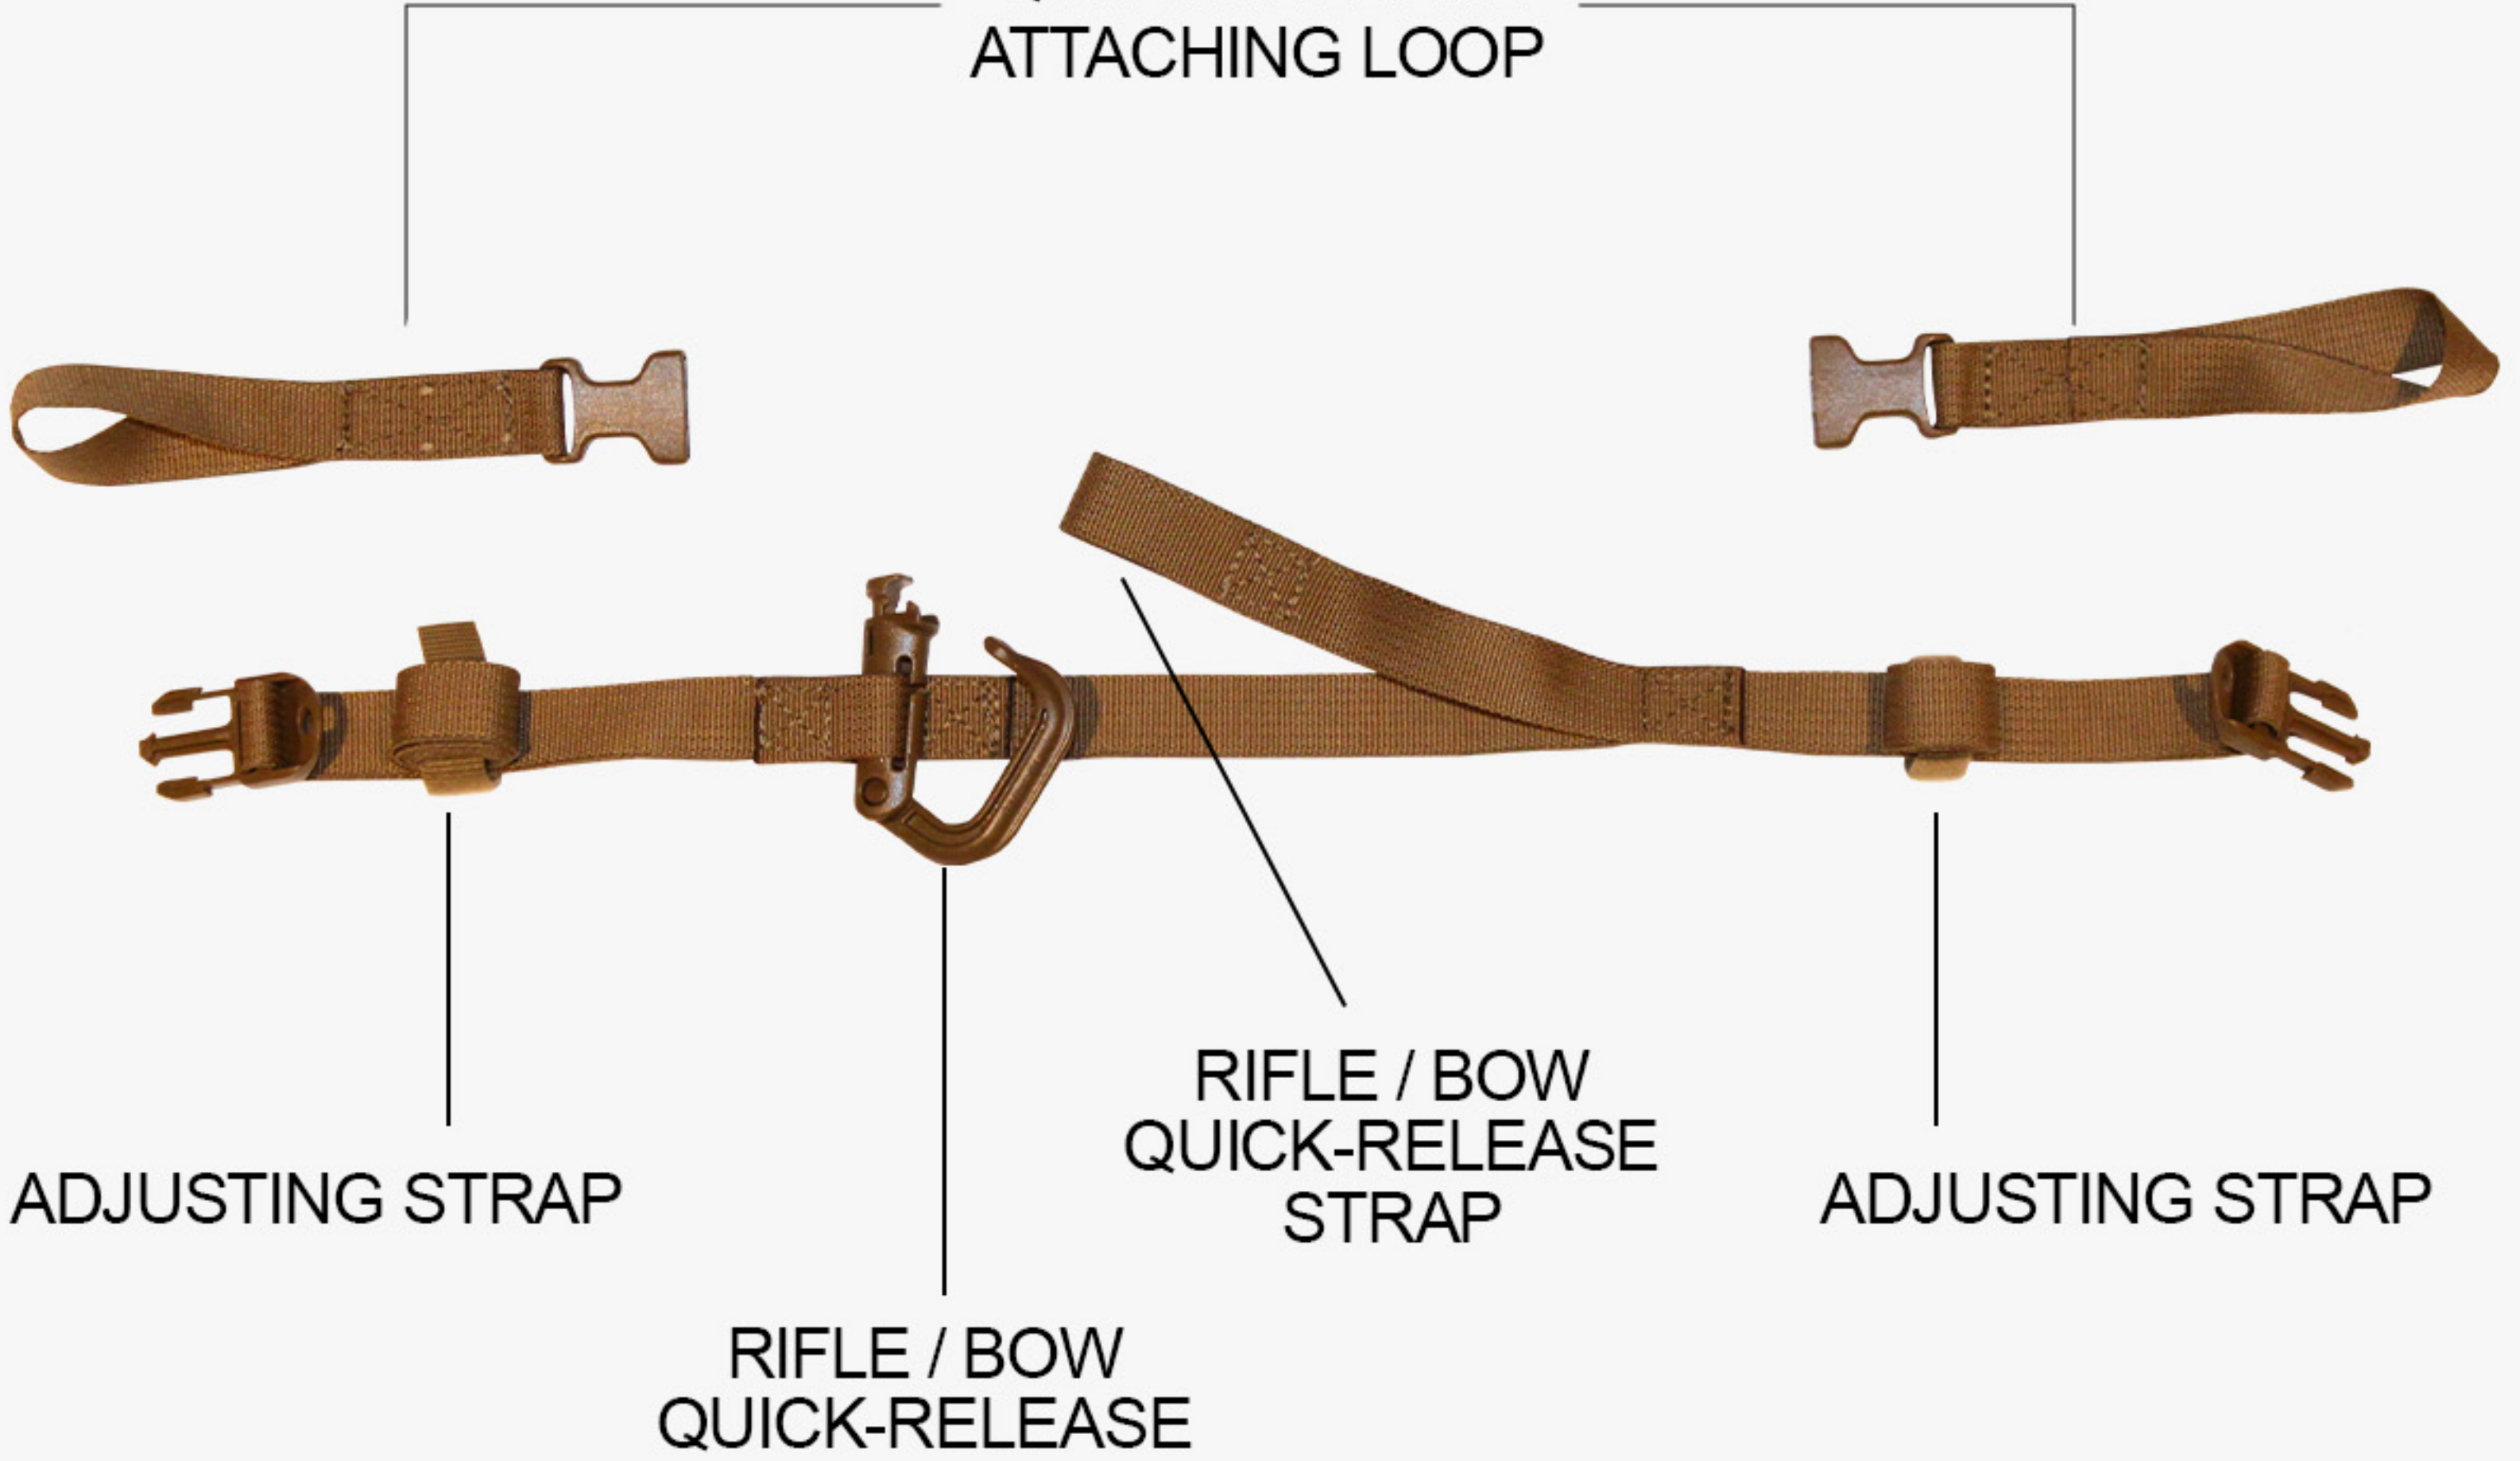

RIFLE / BOW CRADLE

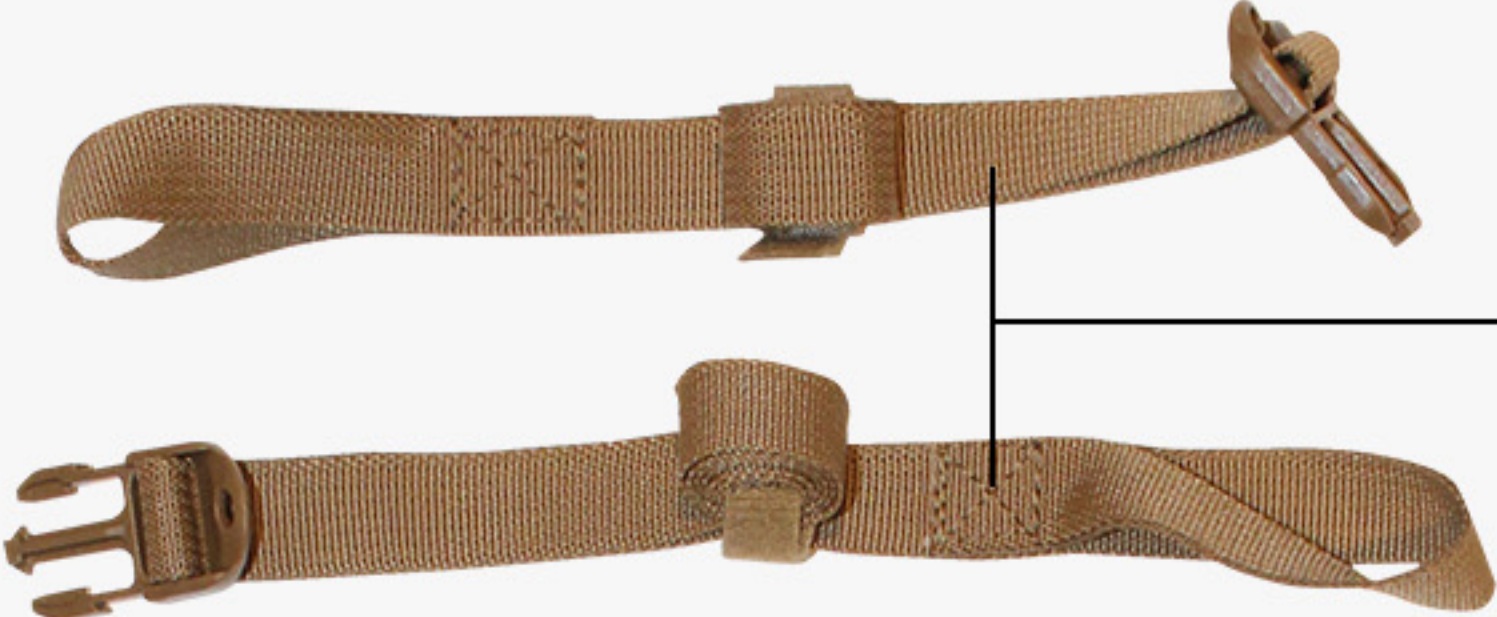

QUICK-RELEASE
ATTACHING LOOP



HOOK-N-LOOP
ADJUSTMENT TAB

SCUFF PAD

RIFLE / BOW CRADLE



PRONGHORN ASSEMBLED



PRONGHORN ASSEMBLED

A. Quick-Release Attaching Loops of the Horizontal Rifle / Bow Retention Strap are routed around any soft-loop or hard-point of a pack or frame. The buckle ends are passed through the loops and pulled tight to create a secure girth hitch.

B. Quick-Release Attaching Loops of the Rifle / Bow Cradle are routed around any soft-loop or hard-point of a pack or frame. The buckle ends are passed through the loops and pulled tight to create a secure girth hitch.

C. Ends of the Horizontal Rifle / Bow Retention Strap are connected to their corresponding Quick-Release Attaching Loops. The adjusting straps are used to create a snug fit around the pack, and to orient the position of the Quick-Release and Quick-Release Strap to correspond with the desired location (left / right / center).

D. Rifle / Bow Quick-Release (G-Lock) is activated by depressing the button located opposite the hinged end.

E. The Rifle / Bow Quick-Release Strap is passed around the forestock or riser and secured with the G-Lock.

F. The Rifle / Bow Cradle is connected to the Quick-Release Attaching Loops. Adjust the length of each attaching loop's strap to raise or lower the position of the Cradle as desired.

